



ELECTRONIC SCOPE LEVEL

USER MANUAL




<https://marcooptics.com>

INCLUDED



① ELECTRONIC SCOPE LEVEL

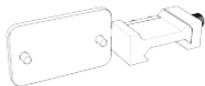

② CLAMP



③ CHARGING CABLE

-1-

FEATURES

Quick & Intuitive Programming

Set up your device in seconds with streamlined, shooter-focused controls.

Rapid Target Alignment

Check your rifle's true level at a glance-without breaking your sight picture.

Level Sensitivity

Fixed 1.0° sensitivity for reliable and consistent leveling.

Auto-Adjusting Orientation

Automatically adapts to vertical, horizontal, and inverted mounting positions.

-2-

Manual OLED Brightness Control

Three selectable brightness levels for clear visibility in any lighting environment.

Dual-Mode Operation


A 1-second long press on the button seamlessly switches between Horizon Level Mode and Electronic Level Mode.

-3-

SPECIFICATIONS

Dimensions

1.574" (40 mm) L
0.944" (24 mm) W
0.59" (15 mm) H

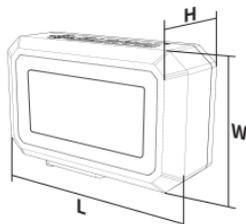

Power Source

Rechargeable Li-ion

Mounting Option

Picatinny rail

-4-

OPERATING INSTRUCTIONS

Powering On/Off the Level

Press and hold the button for more than 3 seconds.

Light Intensity Adjustment

Choose from 3 intensity levels.


Increase Brightness = Short press the button



-5-


Mode Selection

A 2-second long press on the button seamlessly switches between Horizon Level Mode and Electronic Level Mode.

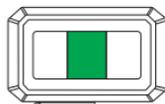

Horizon Level Mode


Press 2 second

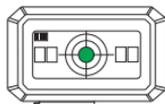

Electronic Level Mode


-6-

HORIZON LEVEL MODE

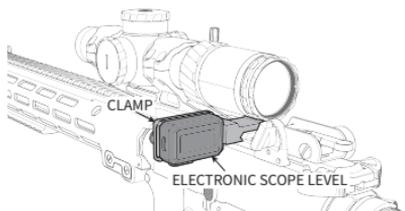


Installation: Use the clamp to horizontally secure the level at an appropriate position on the rail.

-7-

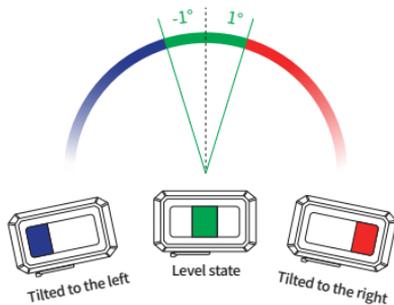


HORIZON LEVEL MODE

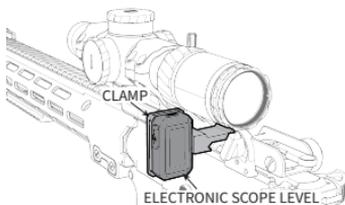


Installation: Use the clamp to vertically secure the level at an appropriate position on the rail.

-9-

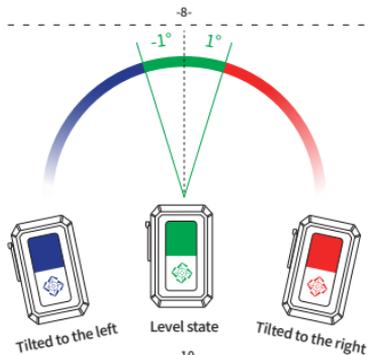


ELECTRONIC LEVEL MODE

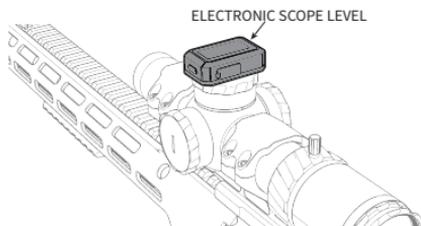

Installation: Securely attach the level to the top of the scope's turret.

-11-

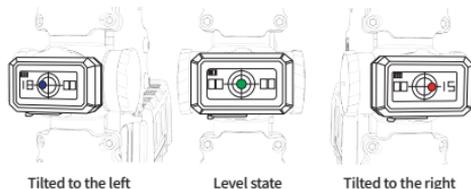

-12-

MANUAL CALIBRATION

This device is factory-calibrated and leveled. If the mounting surface is uneven, slight deviations may occur.

To Calibrate Manually:

Enter each level mode. **Double-click** the button within 0.7 seconds.


To Restore Factory Settings:

Triple-click the button within 0.7 seconds.

All user-adjusted angle values will be cleared.



(NOTE: Make sure it's perfectly stable during calibration.)

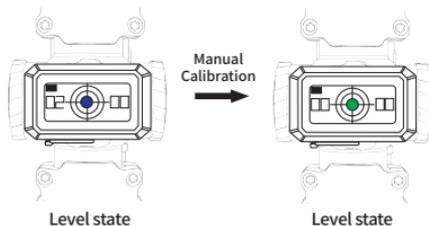

-13-

-14-